

INSTRUCTION

1st step :

Choose the right buckle

- please use the **A** buckle which suits most of cars .
- if the A buckle doesn't work well , then use the G buckle .




A



G

2nd step :


Place the buckle upon the obd2 port .

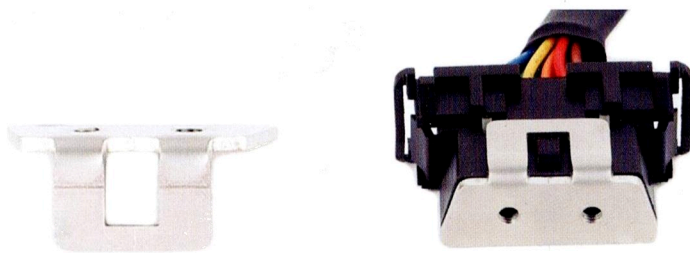

Note: You can use the adhesive tape to help the buckle placed on the obd2 port , so that you can cover the cap easily.

3rd step :

Cover the cap and tighten the screws:

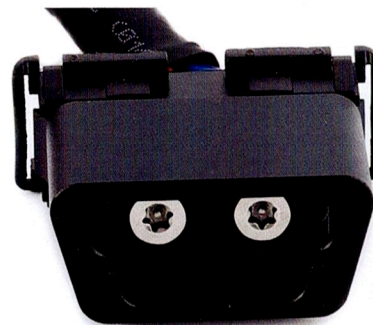

4th step :

Cover the lock cap ,then turn the key clockwise to lock it .

