
Attaching your Spindle / Router



1. **Unpack the router bracket assembly kit and attach the M5 8mm bolts through the angle brackets and attach an M5 drop-in T-nut to the rear of each one.**

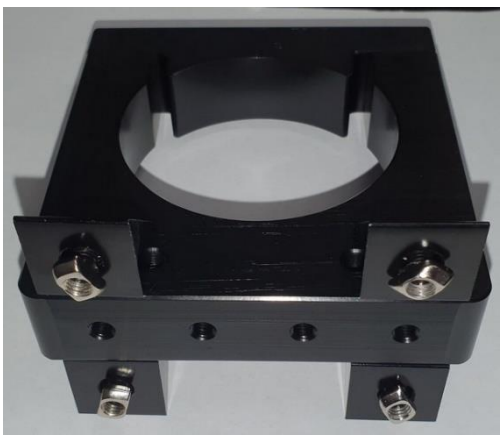

2. **Loosely fasten the angle brackets towards the rear of the spindle in the outer edge mounting holes**



3. **Attach the router clamp to the front of the Z axis loosely and use a spirit level to get the router clamp relatively level then tighten all of the bolts to hold the clamp to the Z axis.**



4. **Loosen the front bolts on the router clamp and insert your trimmer. Ensure when fitting the router that the bottom of the collet nut sits just below the Z axis to ensure it is the lowest point. It is recommended to secure your router with the clamp as low as possible but if you are using a dust shoe make sure to leave an allowance for it.**



